
Muscle BioAmp Blip

Upside Down Labs

Apr 25, 2024


CONTENTS

| | | |
|---|---------------------------|---|
| 1 | Overview | 2 |
| 2 | Features & Specifications | 3 |
| 3 | Hardware | 4 |
| 4 | Connecting with Arduino | 6 |
| 5 | Some project ideas | 7 |

A mikroBUS™ compatible ElectroMyography (EMG) sensor for precise recording of muscle signals.

OVERVIEW

Muscle BioAmp Blip is single channel mikroBUS™ compatible ElectroMyography (EMG) sensor for precise muscle signal recording. It allows you to add the EMG functionality to your projects at ease. You can either connect it to any mikroBUS port or even a breadboard to get started.

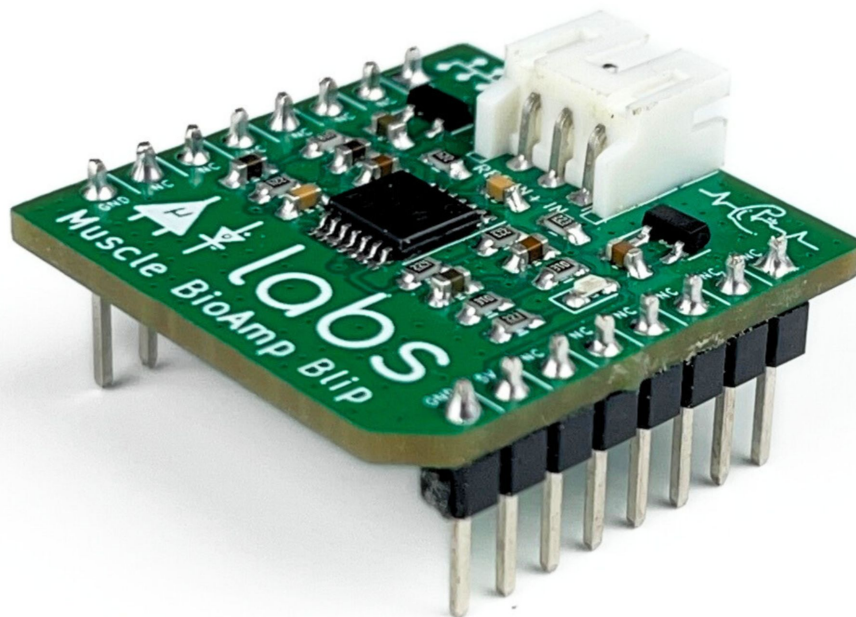

FEATURES & SPECIFICATIONS

| | |
|-----------------------|--|
| Minimum Input Voltage | 5 V |
| Input Impedance | 10^{12} ohm |
| Fixed Gain | x2420 |
| Bandpass filter | 72 – 720 Hz |
| Compatible Hardware | Any development board with an ADC (Arduino UNO & Nano, Espressif ESP32, Adafruit QtPy, STM32 Blue Pill, BeagleBone Black, Raspberry Pi Pico, to name just a few) |
| BioPotentials | EMG (Electromyography) |
| No. of channels | 1 |
| Electrodes | 3 (Positive, Negative, and Reference) |
| Dimensions | 2.54 x 2.86 cm |
| Open Source | Hardware + Software |

HARDWARE

Images below shows a quick overview of the hardware design.

PCB Front



PCB Back






CONNECTING WITH ARDUINO

To get started, you can pair Muscle BioAmp Blip with any development board with an ADC (Arduino UNO & Nano, Espressif ESP32, Adafruit QtPy, STM32 Blue Pill, BeagleBone Black, Raspberry Pi Pico, to name just a few) or any standalone ADC of your choice.

To measure the EMG signals, connect BioAmp Cable v3 with your muscle sensor as shown in the image below:

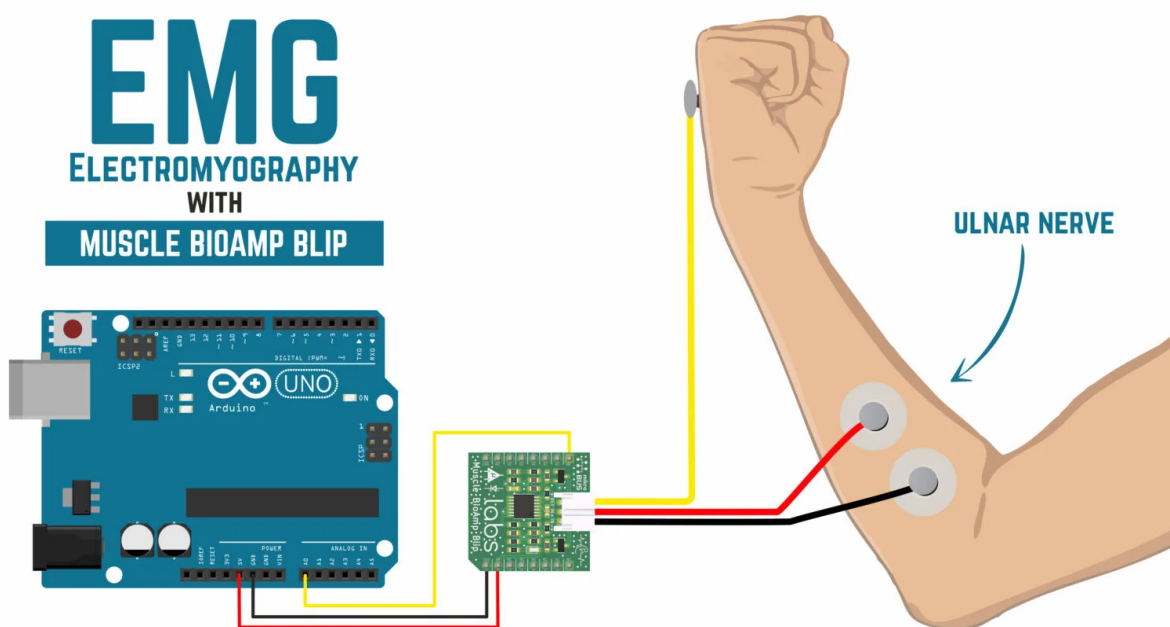

SOME PROJECT IDEAS